CELL PHONE GPS TRACKER

TV-806

Introduction

This mobile phone represents the perfect combination of GSM and GPS technologies. It is characterized by streamline fashionable profile design, simplicity and elegance; it fully shows the fashionable personality. With large-capacity phonebook, SMS, alarm clock, call center, phone settings, FM radio, GPS, hang-up state emergency alarm, etc, it can help you enjoy a rich and colorful life.

Accessories

- 1X mobile phone;
- 1 x battery;
- 1x charger
- 1x user manual;
- 1x certificate of conformity.

Specifications

Lithium battery		
Normal voltage	3.7V 1300MAH	
Charging voltage	4.2V	
Charger		
Input	AC220V(+/- 20%) 50Hz 50mA	
Output	DC5.0V 500mA	
Charging time	12h for the first three times and 3-6h thereafter.	
Work frequency	850/900/1800/1900MHZ	
Continuous call duration	About 5h	
Continuous standby duration	7 days (GSM standby)	
Dimensions	118mm*63mm*27mm	
Weight	110g (including battery)	

* The standby duration and call duration depend on the local network and GPS application.

Appearance



SN	Name	Functional Description
1	FM antenna	When listening to FM radio, you need to pull out the FM antenna.
2	Volume key	During call, listening to FM radio, etc, to adjust volume, just press this key.
3	FM shortcut key	Push the key upward to open FM radio and downward to close it.
4	Answer and dial key	Dial a call or receive a call; in standby, press this key to enter the latest call log.
5	Flashlight	Push the key upward to open the flashlight.
6	Receiver	Voice, ring tone and FM output
7	Screen	
8	Direction key	Adjust menus; the left and right direction keys are for Enter and Back.
9	End key	End or refuse a call; In operation, back to the previous level, i.e. Cancel or Back; On the switch-off state, press this key long to switch on the phone; On the standby interface, press this key long to switch off the phone; On the non-standby interface, press this key long to back to standby interface in shortcut way.
10	Keypad	On the Edit interface, press * key to input special symbols and press the # key to switch input modes.
11	MIC	
12	I/O port	For charging and headset.
13	Lanyard port	For lanyard
14	Flashlight switch	Upward to switch on the flashlight, downward to switch off the flashlight.
15	Keypad lock switch	Upward to unlock, downward to lock the keypad (except SOS key)
16	SOS key	In switch-on/off state, press this button for 3 for SOS